INVECS-II 4A/T

Except 6A1-SOHC-MPI <L.H. drive vehicles>

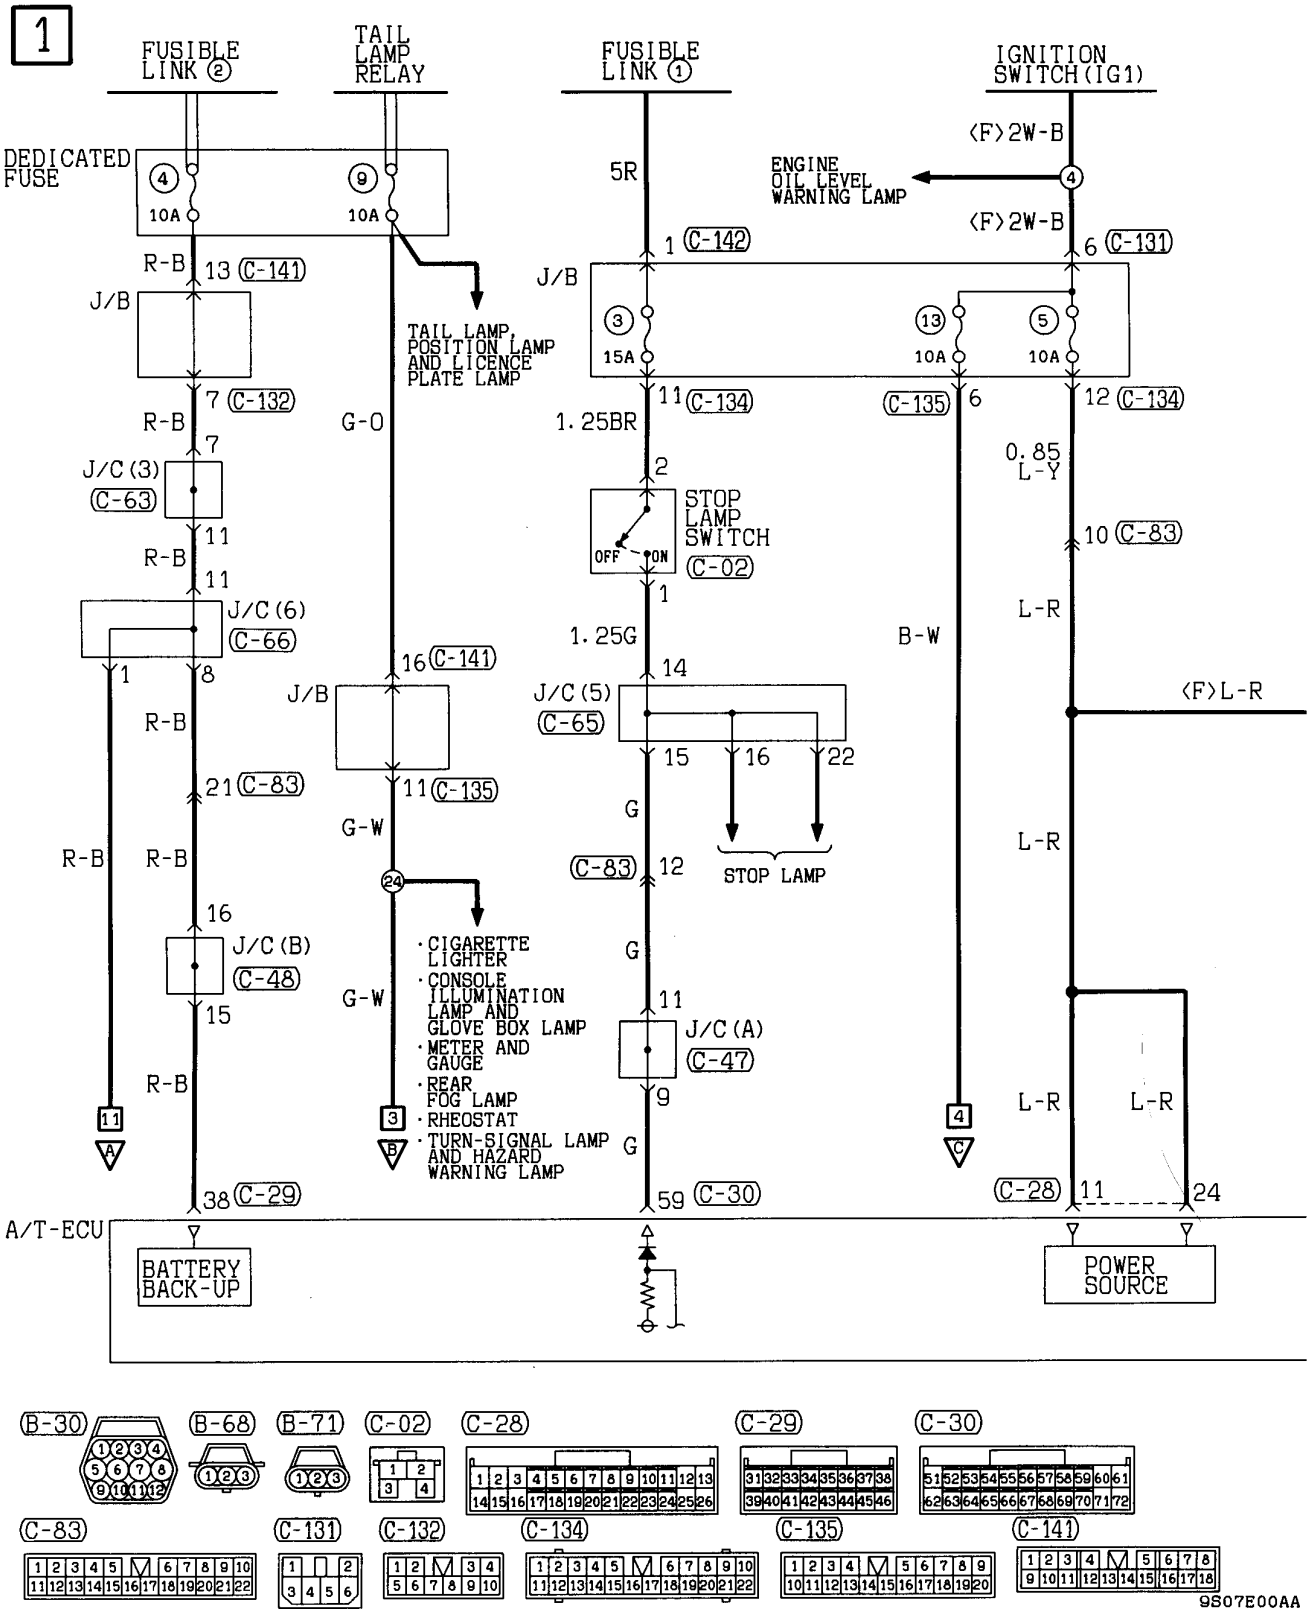

2

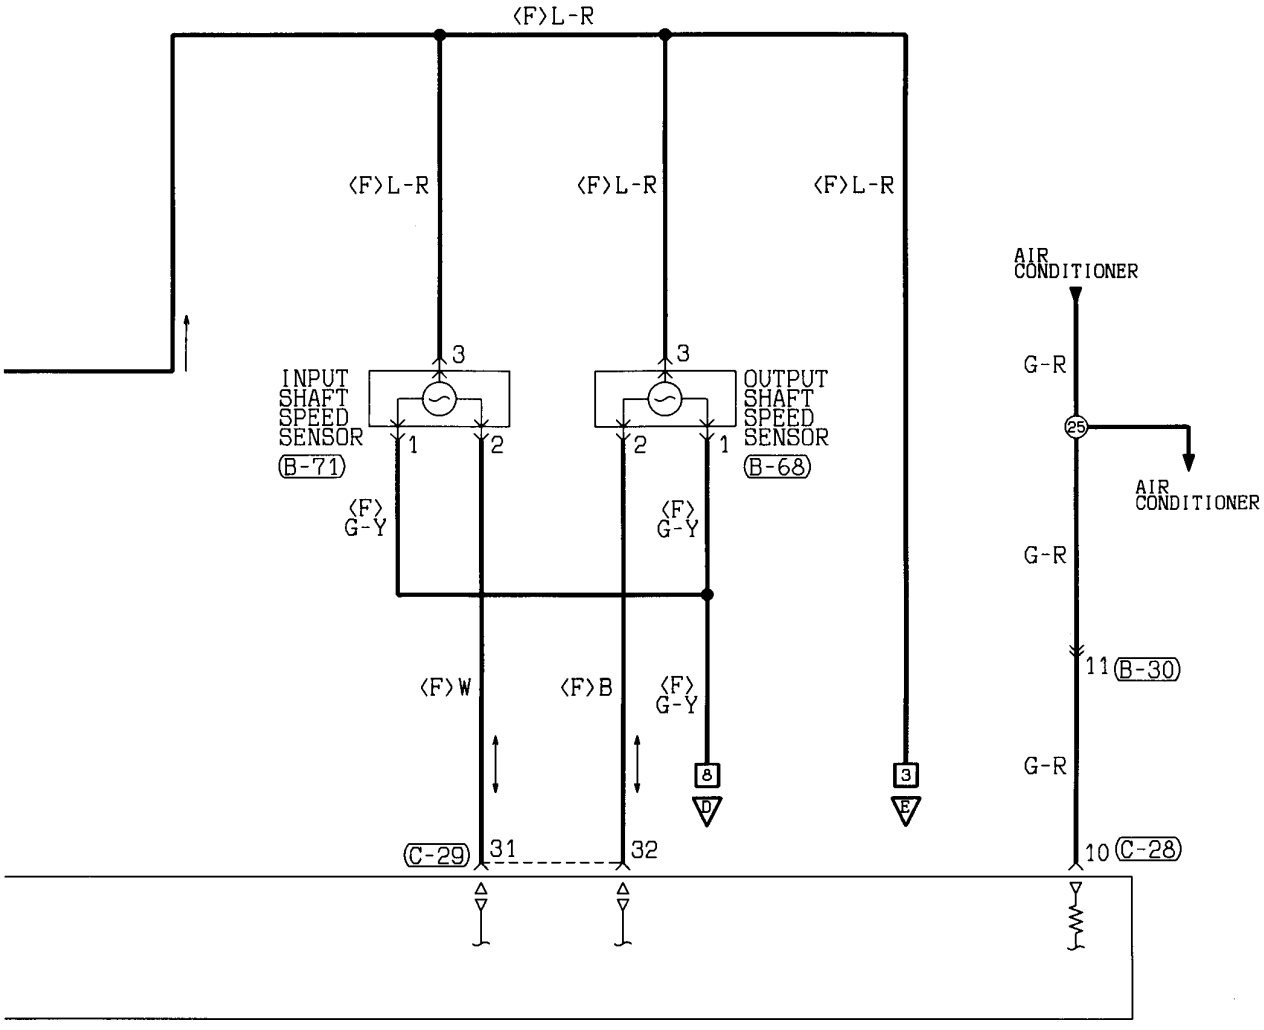



C-142

Wire colour code

B :Black	LG:Light green	G :Green	L :Blue	W :White	Y :Yellow	SB:Sky blue
BR:Brown	O :Orange	GR:Gray	R :Red	P :Pink	V :Violet	

9S07E00AB

INVECS-II 4A/T <Except 6A1-SOHC-MPI (L.H. drive vehicles)> (CONTINUED)

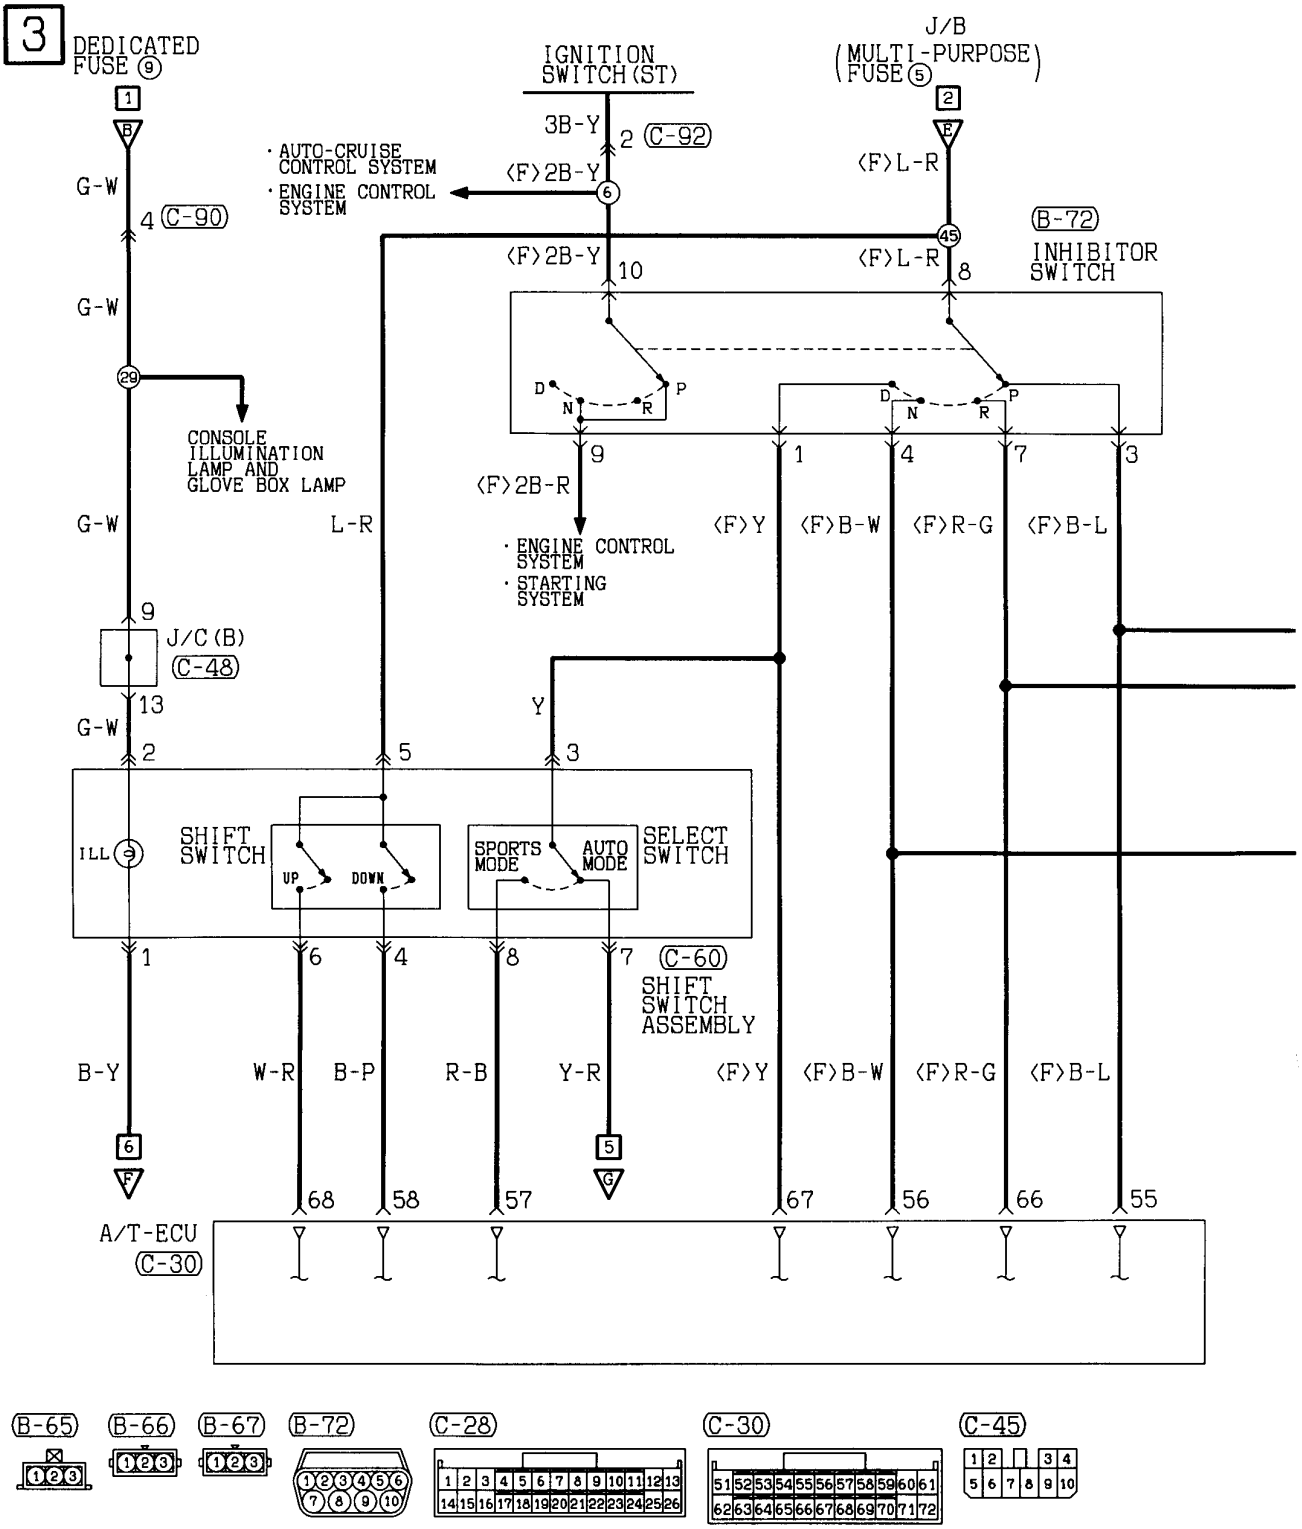

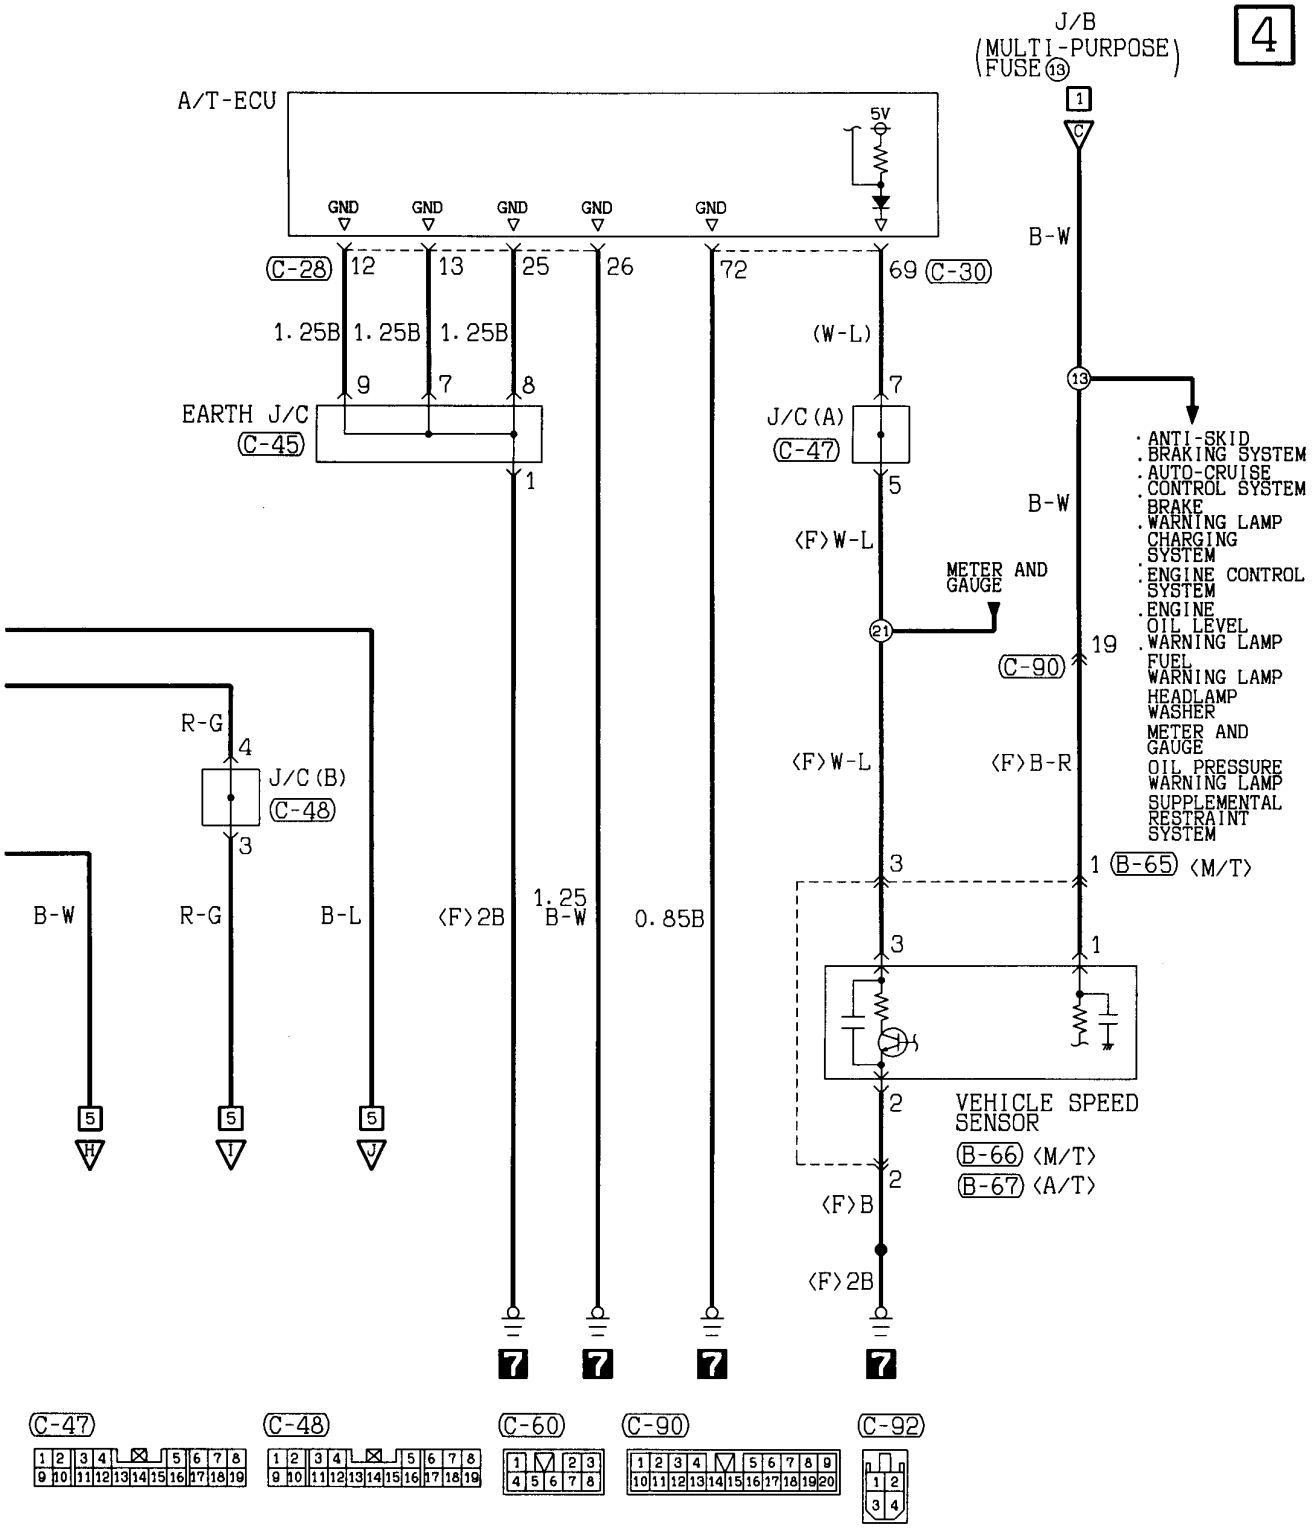
4
J/B
(MULTI-PURPOSE FUSE 13)
A/T-ECU
5V
GND
GND
GND
GND
GND
C-28
12
13
25
26
72
69
C-30
1.25B
1.25B
1.25B
(W-L)
9
7
8
7
EARTH J/C
C-45
J/C (A)
C-47
1
5
B-W
13
· ANTI-SKID BRAKING SYSTEM
· AUTO-CRUISE CONTROL SYSTEM
· BRAKE WARNING LAMP CHARGING SYSTEM
· ENGINE CONTROL SYSTEM
· ENGINE OIL LEVEL WARNING LAMP
FUEL WARNING LAMP
HEADLAMP WASHER
METER AND GAUGE
OIL PRESSURE WARNING LAMP
SUPPLEMENTAL RESTRAINT SYSTEM
(F)W-L
METER AND GAUGE
21
19
C-90
(F)W-L
(F)B-R
R-G
4
J/C (B)
C-48
3
1
B-65
(M/T)
B-W
R-G
B-L
(F)2B
1.25 B-W
0.85B
3
3
1
2
VEHICLE SPEED SENSOR
B-66 (M/T)
B-67 (A/T)
2
(F)B
(F)2B
5
H
5
I
5
J
7
7
7
7
C-47
C-48
C-60
C-90
C-92
Wire colour code
B :Black LG:Light green G :Green L :Blue W :White Y :Yellow SB:Sky blue
BR:Brown O :Orange GR:Gray R :Red P :Pink V :Violet
9S07E00BB

INVECS-II 4A/T <Except 6A1-SOHC-MPI (L.H. drive vehicles)> (CONTINUED)

5

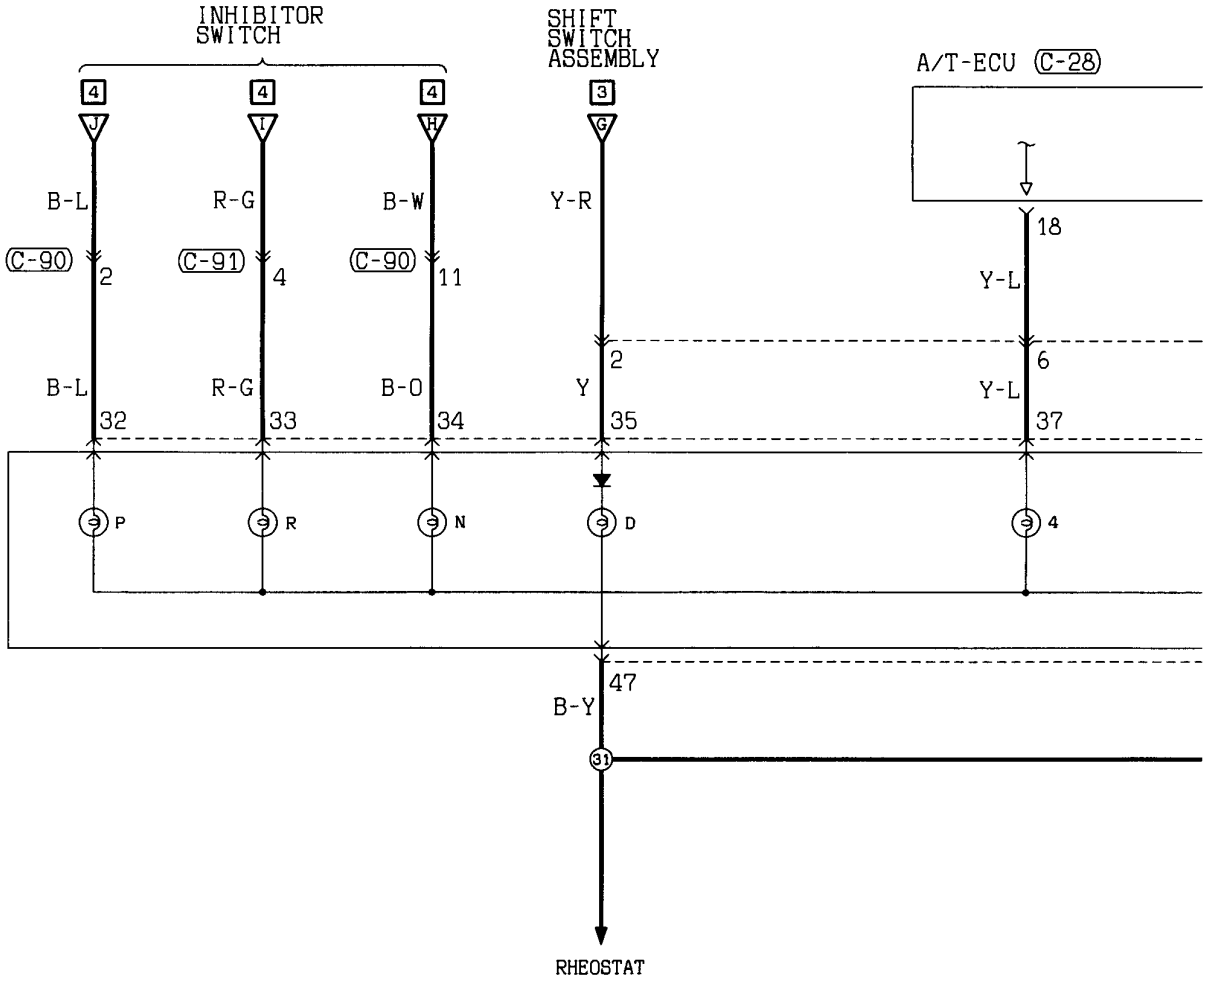



9S07E00CA

6

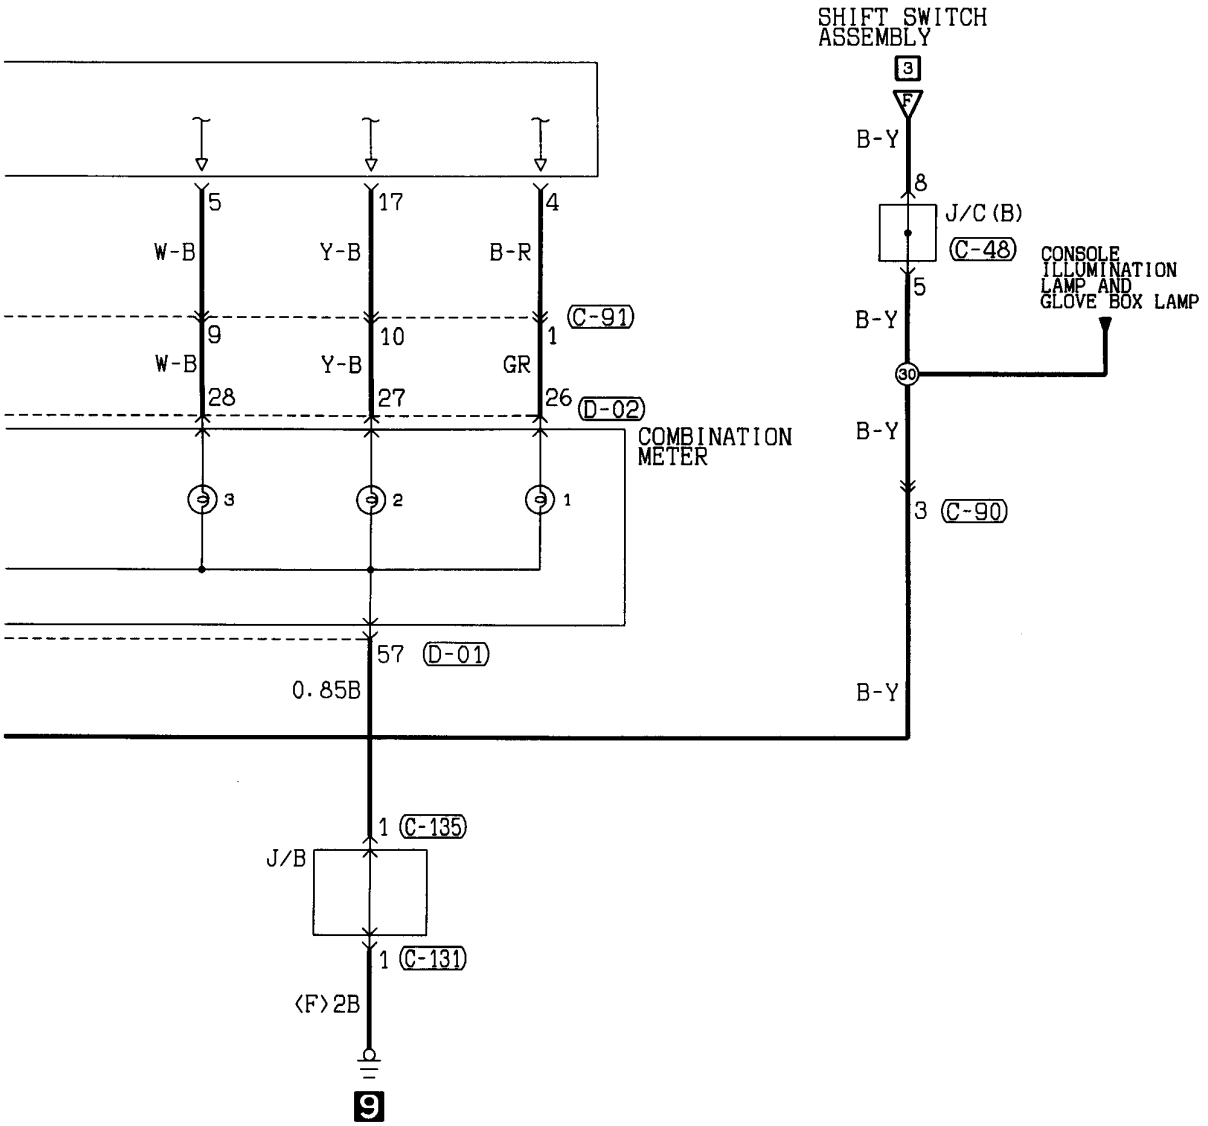



Wire colour code
B :Black LG:Light green G :Green L :Blue W :White Y :Yellow SB:Sky blue
BR:Brown O :Orange GR:Gray R :Red P :Pink V :Violet

9S07E00CB

INVECS-II 4A/T <Except 6A1-SOHC-MPI (L.H. drive vehicles)> (CONTINUED)

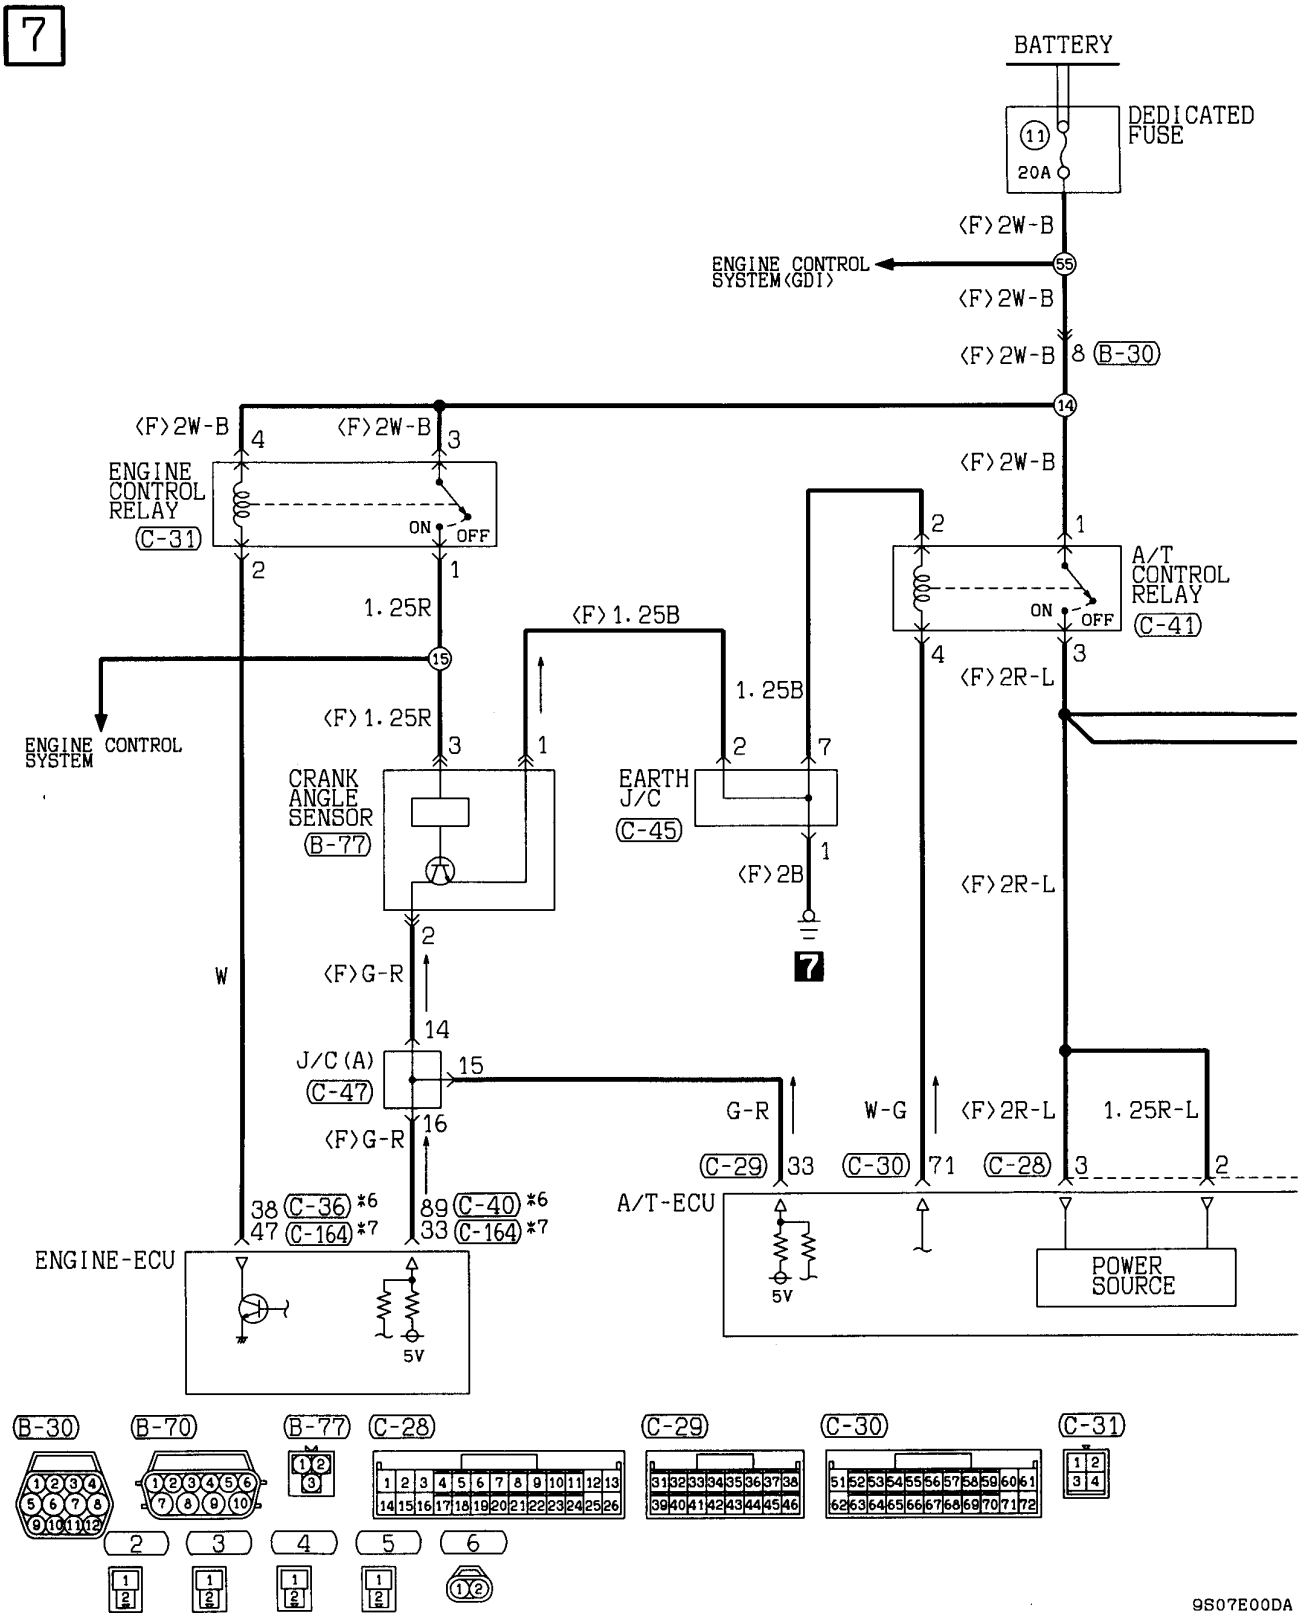

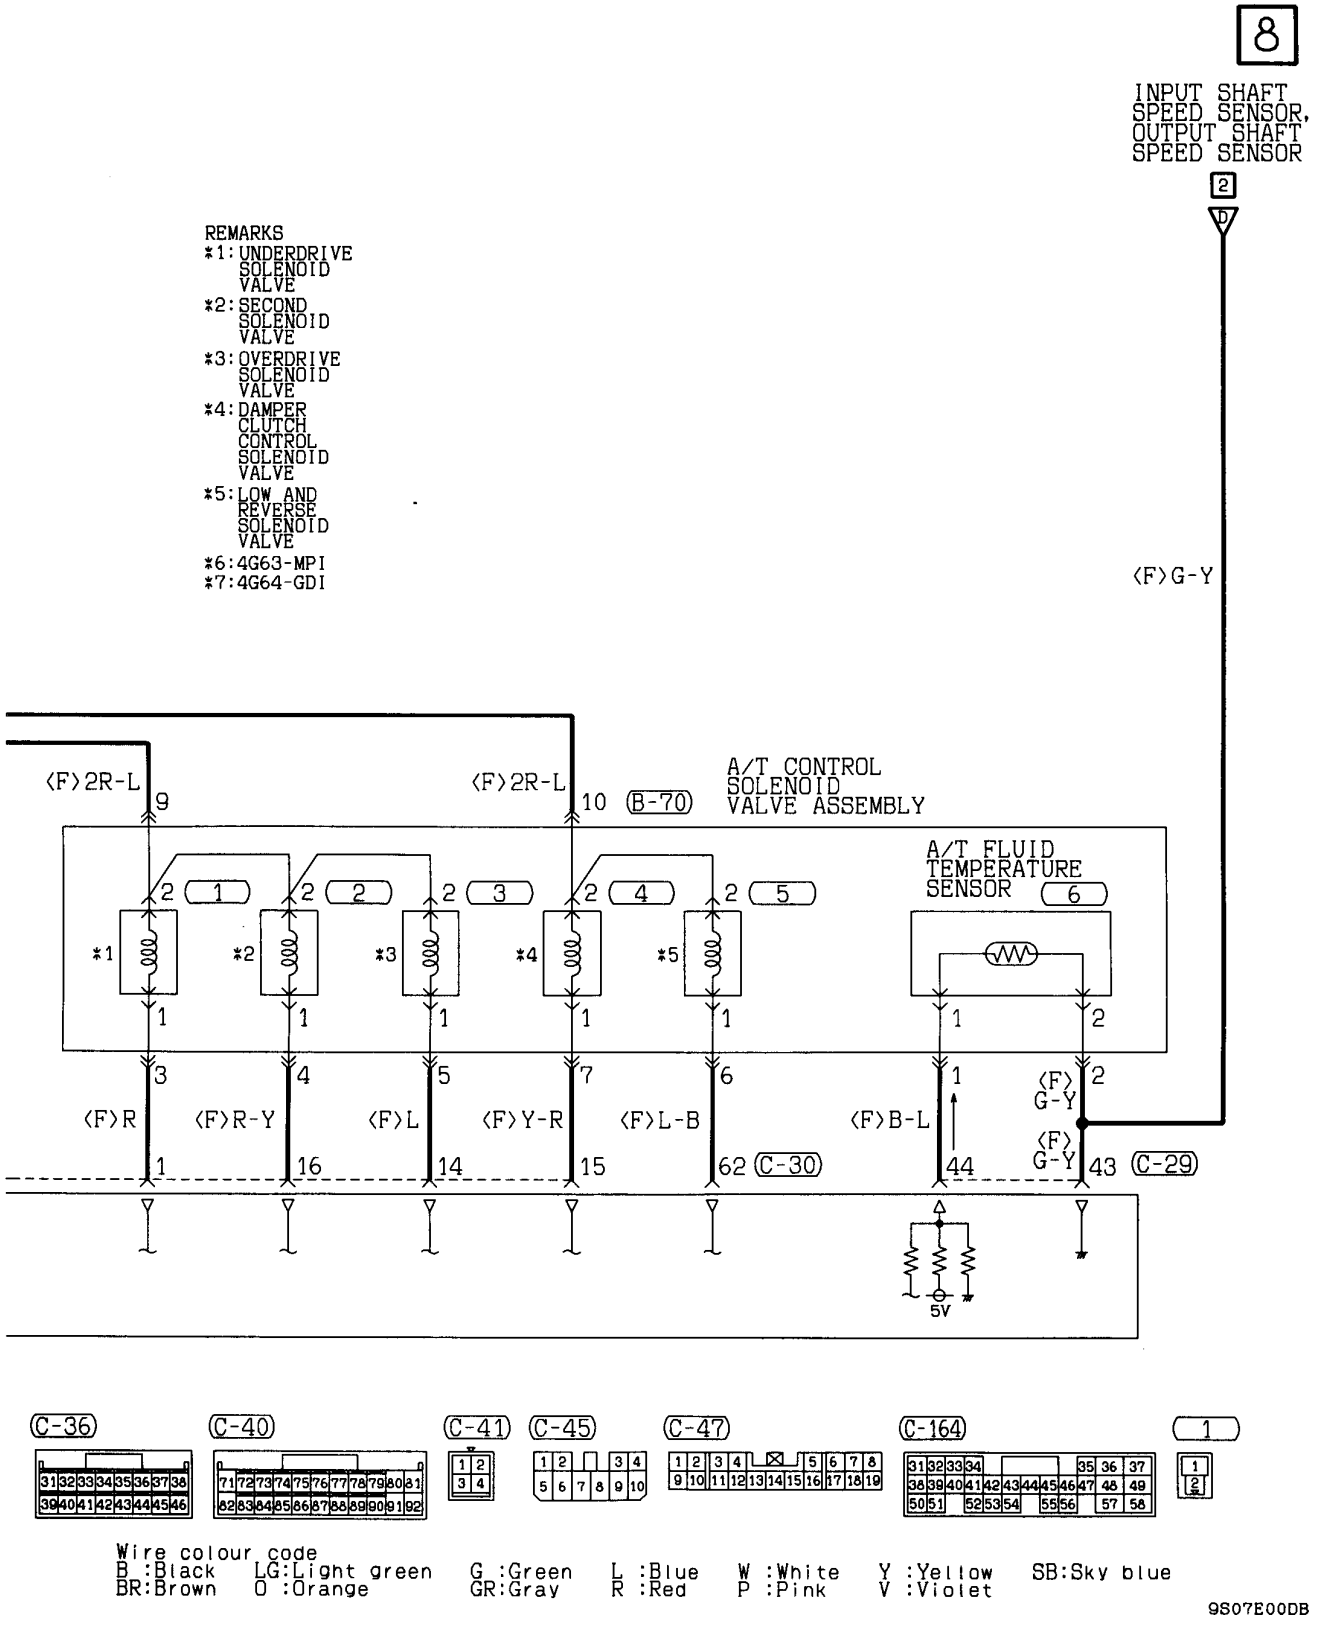

Wire colour code

B :Black	LG:Light green	G :Green	L :Blue	W :White	Y :Yellow	SB:Sky blue	
BR:Brown	O :Orange	GR:Gray	R :Red	P :Pink	V :Violet		

9S07E00DB

INVECS-II 4A/T <Except 6A1-SOHC-MPI (L.H. drive vehicles)> (CONTINUED)

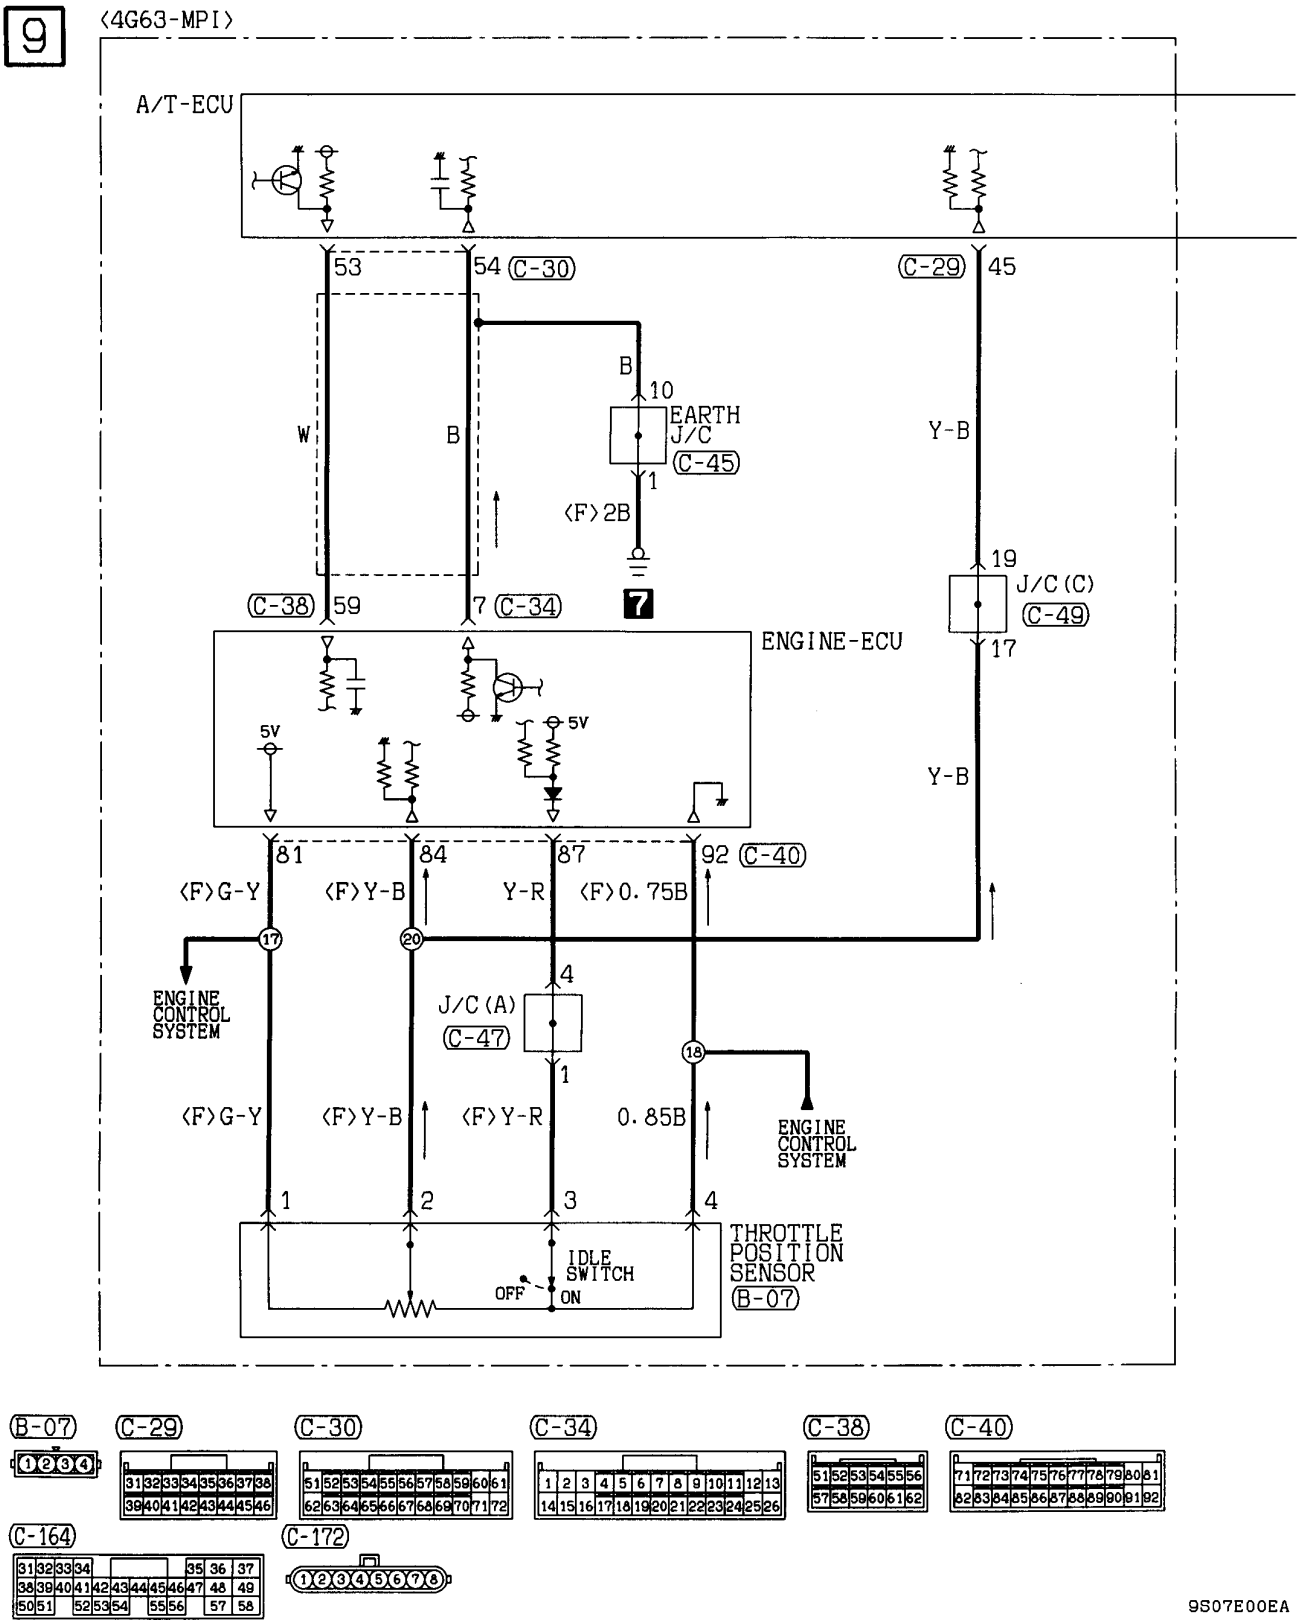

9S07E00EA

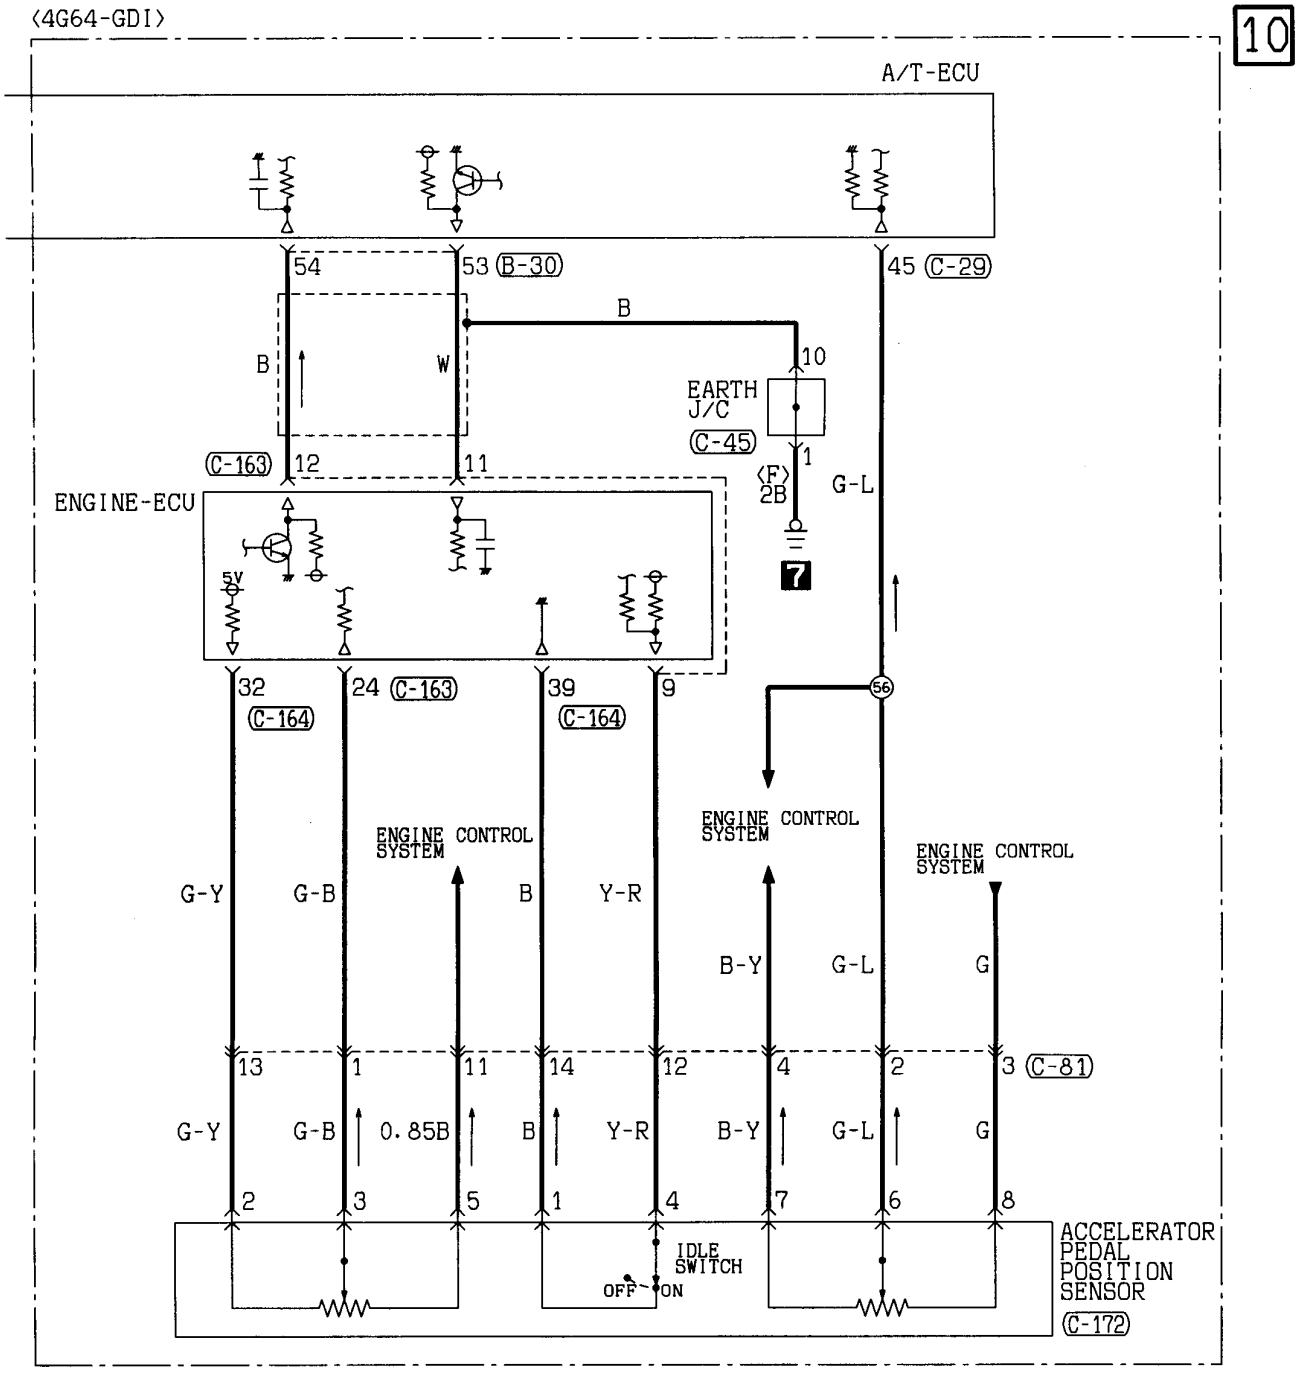



Wire colour code
B :Black LG:Light green G :Green L :Blue W :White Y :Yellow SB:Sky blue
BR:Brown O :Orange GR:Gray R :Red P :Pink V :Violet

9S07E00EB

INVECS-II 4A/T <Except 6A1-SOHC-MPI (L.H. drive vehicles)> (CONTINUED)

11

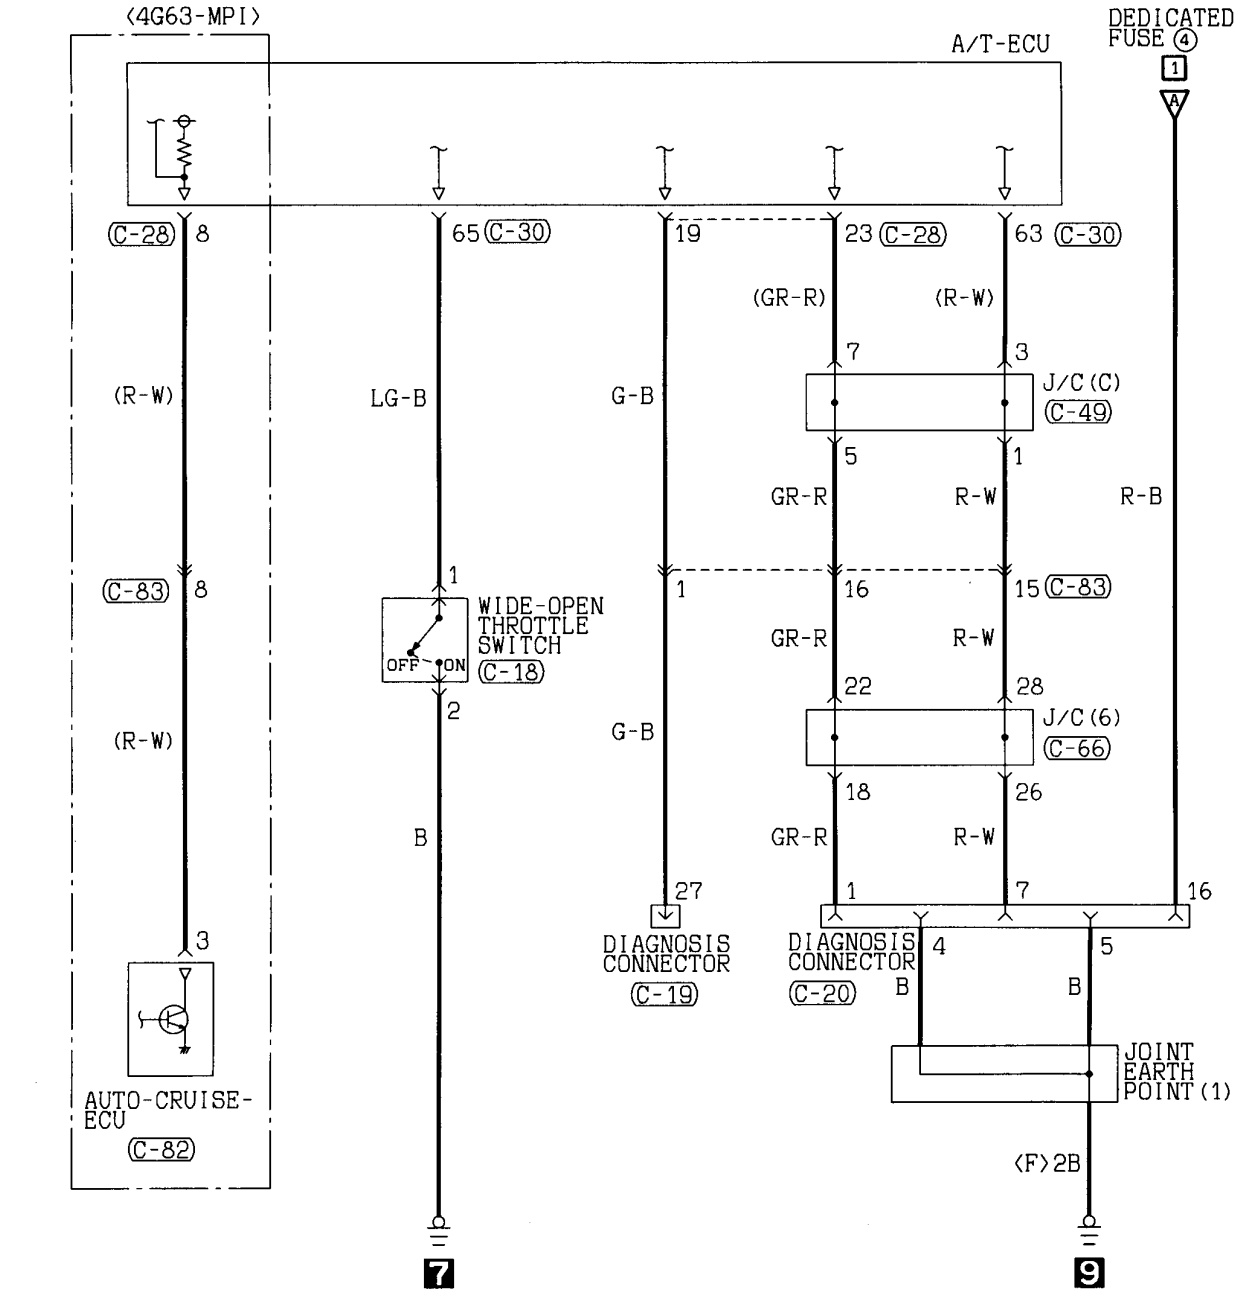

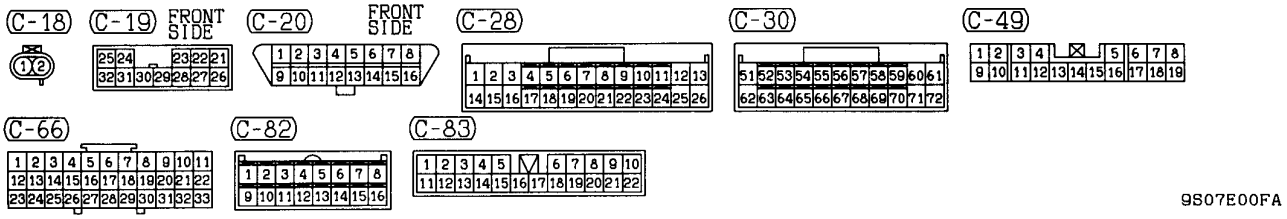

9S07E00FA

NOTES